

FERRET HEAD SIZING GUIDE

The Ferret Leak Location System is for use in pipes with internal diameters from 10mm (3/8") to 45mm (1 3/4"). There are five different size Ferret's for this range of pipes. The table shows the dimensions of the Ferret's and the recommended pipe diameters that they should be used in.



Size	Ferret Head		Leaking Pipe			
	Outer Ø (deflated)		Internal Ø (mm)		Internal Ø (inch)	
	mm	inch	minimum	maximum	minimum	maximum
Zero	8	5/16	9.5	13	3/8	1/2
One	9	23/64	10.5	15	13/32	19/32
Two	13	33/64	14.5	20	9/16	25/32
Three	17	43/64	18.5	30	23/32	13/16
Four	23	29/32	24.5	45	61/64	13/4